


Voicesaver

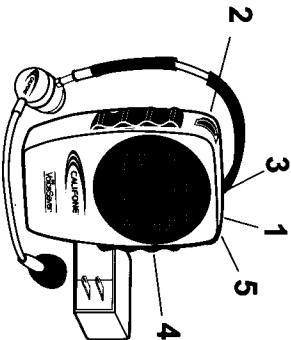

Controls and Functions

- 1) MIC IN ENTRÉE MICRO
- 2) POWER ON/OFF VOLUME INDICATEUR MARCHE/ARRÊT VOLUME
- 3) LED INDICATOR VOYANT À DEL
- 4) DC IN JACK FICHE ENTRÉE C.C.
- 5) TONE CONTROL RÉGLAGE DE LA TONALITÉ

Callifone Limited Warranty

Callifone warrants that its products, on the date of original purchase, are free from defects in material and workmanship. If any defect in material or workmanship appears within one year of the original purchase, Callifone will repair the product, or, at its option, will replace it with one of equal value or refund the original purchase price less a discount for use) and the defective part or parts will be furnished at no charge if the complete product is returned either in person or by mail, postage or shipping charges prepaid, to Callifone International, Inc., 21300 Superior Street, Chatsworth, CA 91311. Callifone phonographs, tape recorders and players, compact disc players, sound systems, card readers and most headphones are warranted for, and must be returned within one year of original purchase; pick-up cartridges, most accessories and some headphones (30050AV and 3064AV) are warranted for, and must be returned within ninety days of original purchase. Callifone PA-500 portable battery and wireless receivers are warranted for a period of six years with the exception of the cassette mechanism, rechargeable battery and transmitters which are warranted for one year. This warranty does not cover any product that has been damaged due to normal wear, repaired (or so attempted) by others, obviously misused including, (e.g. where the product is overloaded, or has been connected to improper line voltage or DC sources, or where the product is used after partial failure or with improper accessories). In no event shall Callifone be liable for indirect, incidental or consequential damages. This disclaimer applies both during and after the warranty period. **WE DISCLAIM LIABILITY FOR ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF "MERCHANTABILITY" AND "FITNESS FOR A SPECIFIC PURPOSE". AFTER THE TERM OF THIS WARRANTY, THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.**

For your records, fill in product information below.

Model Number: _____ Serial Number: _____

Purchase Date: _____ Purchased from: _____

Callifone garantit ses phonographes, appareils de transcription, systèmes sonores et magnétophones, au propriétaire original, contre tout défaut de pièces ou de construction. Advenant qu'un manque se produise dans un délai d'un an à compter de la date d'achat, la ou les pièces défectueuses seront remplacées gratuitement. Céd ne s'applique pas aux cassettes de tourne-disques qui ne sont garanties que pour 90 jours. Le branchement de l'appareil sur un courant impropre ou à des sources de courant continu, ou un usage abusif annuleront la garantie. Au cas où, pour une raison quelconque, des réparations seraient nécessaires, veuillez communiquer avec le marchand qui vous a vendu cet appareil. Vous obtiendrez un prompt service d'entretien et de réparations de votre marchand Callifone. Si vous avez besoin de recourir au fabricant concernant un certain problème, écrivez-nous en ayant soin de mentionner le numéro du modèle et le numéro de série. Si vous préférez retourner aucun appareil à la manufacture sans avoir au préalable obtenu notre autorisation et nos instructions.

Compléter les renseignements demandés ci-dessous.

No. de Modèle: _____ No. de Série: _____

Date d'achat: _____ Acheté de: _____



21300 Superior Street Chatsworth, CA 91311
800.722.0500 Tel: 818.407.2400 Fax: 818.407.0397
www.callifone.com




Owner's Manual

Manuel d'Utilisation

Voicesaver

Personal P.A.

Système de Sonorisation Personnel

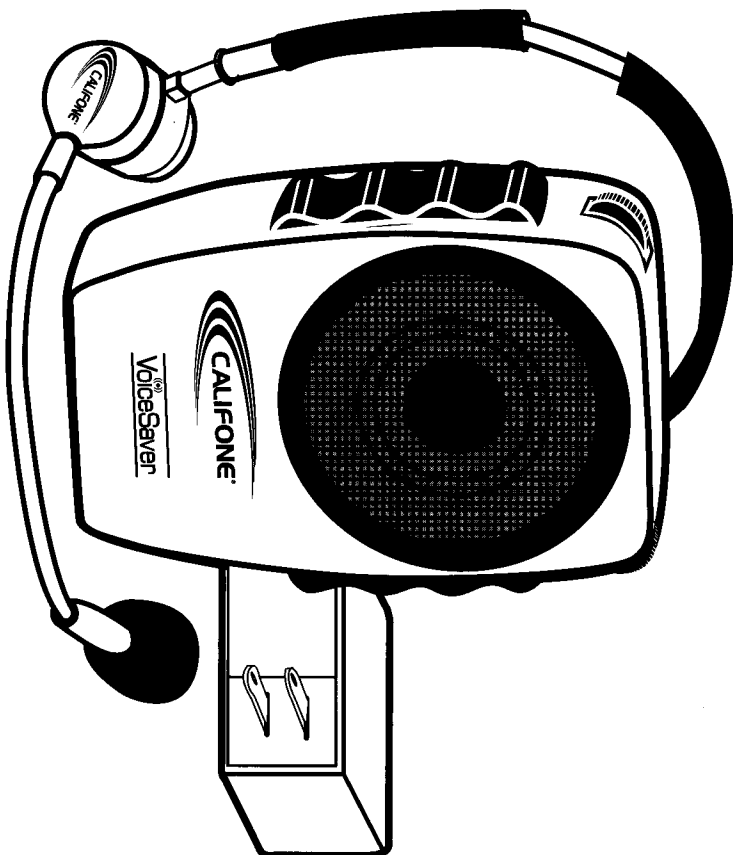

Model

PA2822AV

Member ICA
Member NSSA

INSPECTING & UNPACKING

Although the shipping carton and packaging materials are designed to prevent damage during shipment, you should inspect the carton for any signs of mishandling or damage immediately upon receiving your new unit. Carefully lift the unit from the carton and inspect it for any signs of damage. Save all packaging materials for possible later use.

Note: Any shipping damage or loss claims must be submitted to the freight agent.

Your carton and packaging should contain the following:

- (1) PA282AV VoiceSaver
- (1) Owner's Manual
- (1) DC Battery Charging Adapter
- (1) Headset Microphone
- (4) AA Rechargeable Batteries
- (1) Belt

CAUTION: USE ONLY RECHARGEABLE 'AA' BATTERIES

1. Insert the batteries into the back of the unit. Make sure that new batteries have been charged for at least 3 hours prior to use.
2. Adjust the volume to a suitable level after switching on.
3. Insert the microphone plug to the Mic Input Jack and put on the headset. The closer the microphone is positioned to the mouth, the better the result. (To reduce feedback, the microphone capsule should be at least 18" away from the speaker.)
4. Clip the speaker to the supplied belt or your waistband.
5. Turn the unit on and adjust the volume and tone.

CHARGING THE BATTERIES

1. Insert the batteries into the back of the unit.
2. Turn the unit off.
3. Insert the female plug end of the 6V. DC battery charging adapter into the DC IN Jack.
4. Plug into an AC outlet (120V) and charge for eight hours.

SPECIFICATIONS

POWER OUTPUT:	2 Watts RMS
DISTORTION:	Less than 5%
FREQ. RESP.:	500 Hz - 5,000 Hz
SPEAKER:	3" Diameter, 4 Ohms
MIC. INPUT SENS.:	2.8 millivolts
POWER SUPPLY:	4.8 - 5 Volts D.C.
BATTERY:	(4) 1.20 Volt Nickel-Metal Hydride Supplied (1.25V. Ni-Cad Batteries may be used.)
MIC:	Electret, Unidirectional
OPERATING TIME:	6 - 8 Hours @
	70 - 50% Duty Cycle
WEIGHT:	8 ounces

INSPECTION ET DÉBALLAGE

Bien que le carton d'expédition et les matériaux d'emballage soient conçus pour protéger le chargement durant le transport, nous vous recommandons d'inspecter le carton dès sa réception, afin de vérifier qu'il n'a pas été endommagé. Sortez avec précaution l'unité du carton et assurez-vous qu'elle n'est pas endommagée. Conservez tous les matériaux d'emballage afin de pouvoir vous en servir ultérieurement.

Remarque : toute demande de remboursement pour cause d'endommagement ou de perte doit être présentée au transporteur.

Contenu du colis :

- (1) VoiceSaver PA282AV
- (1) Manuel de l'utilisateur
- (1) Adaptateur c.c. de recharge des piles
- (1) casque avec micro
- (4) piles rechargeables de type AA
- (1) ceinture

ATTENTION : N'UTILISEZ QU'AVEC DES PILES RECHARGEABLES

1. Insérez les piles dans la partie arrière de l'appareil. Assurez-vous que les nouvelles piles ont été chargées pendant au moins 3 heures avant d'être utilisées.
2. Une fois ce dernier allumé, réglez le volume au niveau désiré.
3. Branchez le micro dans la fiche d'entrée MIC IN et mettez le casque sur votre tête. Plus le micro est près de votre bouche, plus les résultats obtenus seront bons. (Afin de minimiser l'effet de Larsen, maintenez la capsule microphonique à une distance minimum de 18 po du haut parleur).
4. Attachez le haut parleur à la ceinture fournie ou à votre taille.
5. Allumez l'appareil et réglez le volume et la tonalité.

CHARGEMENT DES PILES

1. Insérez les piles dans la partie arrière de l'appareil.
2. Éteignez l'appareil.
3. Branchez l'extrémité femelle de la prise de l'adaptateur 6V. c.c. de recharge des piles dans la prise d'entrée c.c.
4. Branchez l'adaptateur dans une prise CA (120 V) et laissez les piles se recharger pendant 8 heures.

SPÉCIFICATIONS

SORTIE DE COURANT :	2 WATTS RMS
DISTORSION SONORE :	MOINS DE 5%
RÉPONSE EN FRÉQUENCE :	500 HZ-5000 HZ
HAUT PARLEUR :	3 PO DE DIAMÈTRE, 4 OHMS
SENSIBILITÉ D'ENTRÉE DU M. :	4.8 - 5 V.C.C.
PILES :	(4) PILES À HYDRURE MÉTALLIQUE DE NICKEL, 1.20 V CHACUNE
MICRO :	À ÉLECTRET, UNIDIRECTIONNEL
DURÉE DE FONCTIONNEMENT :	DE 6 À HEURES, À 70-50% DU DE TRAVAIL
POIDS :	8 ONCES